

PK-3 <http://paddlette.com>

Item	Piezo Morse Response	Keying Parameter	Procedure
1	None	Play Message #1	Plays message #1 (if there is one)
2	E	Play Message #2	Plays message #2 (if there is one)
3	S	Speed Adjust	Press dah paddle to increase: press dit paddle to decrease
4	T	Tune	Keys xmtr for tuning. To unkey, press either paddle
5	A	Administration	Release button immediately on hearing 'A'. To move to menu #9, push and hold
6	I	Input Message Set-up	To move to menu item #7, push button quickly, release, wait 1 second, push & hold.
7	1	Message #1 input	Key in message #1 up to 50 characters. Push and release button to review message.
8	2	Message #2 input	Key in message #2 up to 50 characters. Push and release button to review message.
9	P	Paddle select	Press paddle you wish to be the dit paddle.
10	A	Audio select	Press dit paddle to enable sidetone piezo, press dah to disable..
11	SK	Straight-Key select	Press either paddle to enable. To return to keyer mode, cycle back to item 11 and press either paddle.
12	M	Iambic mode	Press dah for iambic mode B (common). Press dit for iambic mode A (older style). Default mode is iambic mode B.
13	B	Beacon mode	Press either paddle to enable. Then access menu item #1 or #2 to start beacon play of message. To disable, cycle back to item #13 and press either paddle.
14	K	Keyer mode	Release button and keyer returns to normal operation.

- To erase a message, go to it on the menu (Item 7 or 8) and press either paddle -- entire message will be erased.
- To play message #1 push and **immediately** release button. If you hear a dit, you have held the button down too long!
- If you don't release button immediately upon hearing 'A' the keyer will move to menu item #14.
- A character is any Morse letter, single digit or punctuation mark.